


Contents:

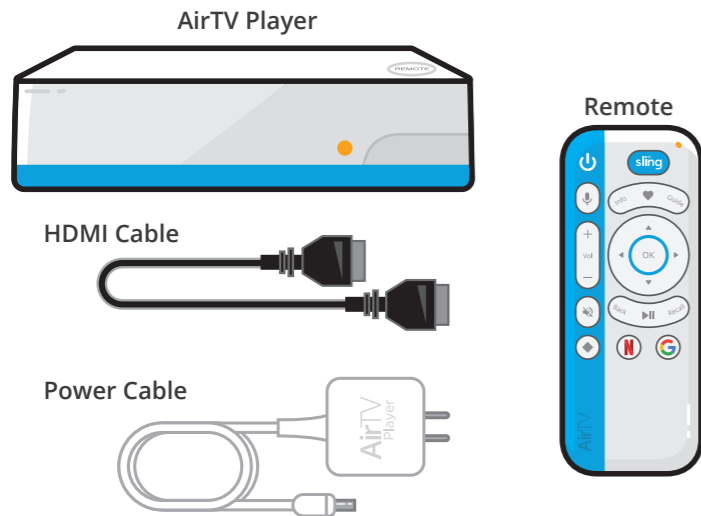

AirTV Player is equipped with features to be used by people with hearing and sight impairments. These features can be turned on during setup or from the Accessibility section in the Settings menu.

Additional information on these accessibility features can be found at AirTV.net/Accessibility, or by calling Customer Support at 866-974-1354.

Warranty information can be found at AirTV.net/Warranty.

Let's get started!



Lost remote? No problem!


Press the **Remote** button on your Player and your remote will begin beeping.



© 2016 EchoStar Technologies, L.L.C.


AirTV
Player

1

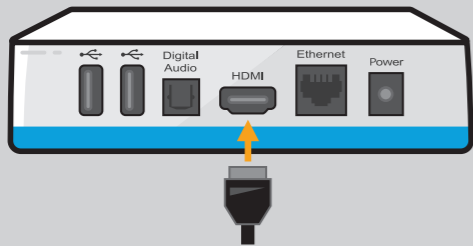


Connect AirTV Player... to your TV using the included HDMI cable.

2

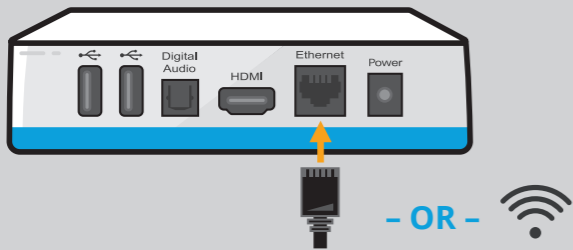


Connect to Internet... using your own Ethernet cable from your router. Or connect to your WiFi network during on-screen setup.

3

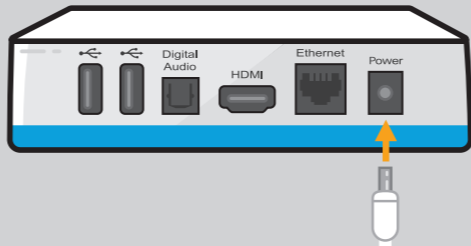

Connect to power... and the light on the front of the AirTV Player will turn on.

4

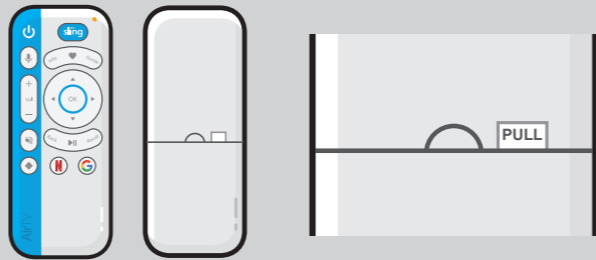

Get the remote ready... by pulling the plastic tab to activate the batteries.

5



Complete on-screen setup... by following the prompts, and logging in to Sling TV and Google (you can create an account during setup if you need to).

Learn more... by going to [AirTV.net/Player](https://www.airtv.net/Player).